
CHEVRON PLACEMENT DETAIL

(GUIDANCE ONLY)

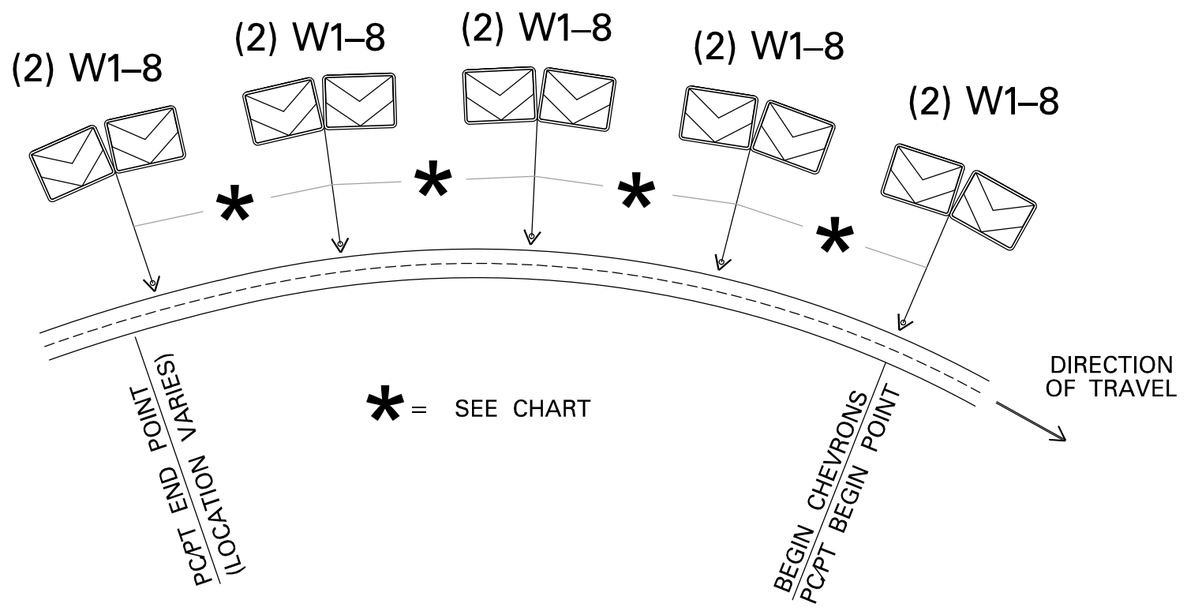

CURVE RADIUS	SIGN SPACING		R.P. CONVERSION
< 200′	40′	=	.008 +–
200′ – 400′	80′	=	.015 +–
401′ – 700′	120′	=	.023 +–
701′ – 1250′	160′	=	.030 +–
> 1250′	200′	=	.038 +–

1) SEE SPEC SHEET FOR CHEVRON PLACEMENT

2) USE BEGINNING OF CURVE LOCATION AS REFERENCE POINT TO INSTALL CHEVRONS (BEGIN POINT – ALWAYS ON OUTSIDE OF CURVE IN DIRECTION OF TRAVEL)