
SNOWPOLE w / PANEL DELINEATOR DETAIL

* = MATCH SNOWPOLE DELINEATOR WITH ROADWAY DELINEATOR. REFER TO DETAIL DRAWING 619-34/36 FOR TYPE.

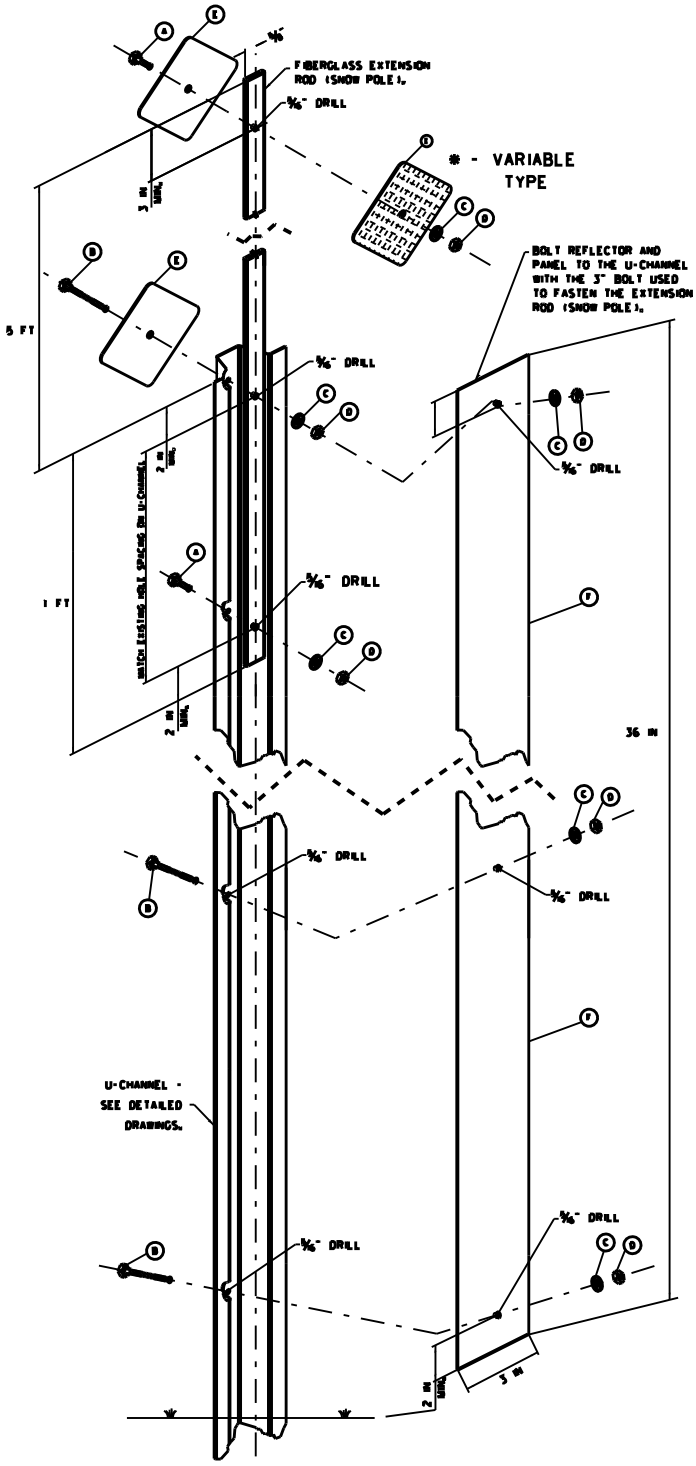

FIELD INSTALLATION

1. INSTALL A 3/8" THICK x 1 1/4" WIDE x 6' LONG SNOWPOLE EXTENSION IN THE METAL U-CHANNEL AS SHOWN.
   FASTEN THE EXTENSION WITH ONE 1/4" x 3" BOLT AND ONE 1/4" x 1" BOLT 12" BELOW THE TOP OF THE METAL U-CHANNEL AS SHOWN.

2. ATTACH TWO REFLECTORS TO THE TOP OF THE EXTENSION AS SHOWN.
   ATTACH ONE REFLECTOR TO THE (BACK) METAL U-CHANNEL AS SHOWN.

   A 1/4" x 1" BOLT - 2 REQUIRED

   B 1/4" x 3" BOLT - 3 REQUIRED

   C 5/16" FLAT WASHER - 6 REQUIRED

   D 1/4" HEX NUT - 6 REQUIRED

   E REFLECTOR - 2 OR 3 REQUIRED

   F 3" x 36" TYPE IV SHEET - 1 REQUIRED
   ALUMINUM RETROREFLECTIVE
   DELINEATION PANEL

3. AFFIX DELINEATOR PANELS TO (FRONT) U-CHANNEL AT A MINIMUM OF THREE LOCATION WITH ATTHACHMENT POINTS WITHIN 2" OF THE TOP, MIDDLE, AND WITHIN 2" OF THE BOTTOM OF EACH PANEL. AFFIX THE PANEL SO THAT THE TOP OF THE PANEL IS WITHIN 2" OF THE TOP OF THE U-CHANNEL AS SHOWN.

4. PANEL DELINEATORS OF EACH TYPE SPECIFIED ARE MEASURED BY THE UNIT AND INCLUDE THE RETROREFLECTIVE PANEL(S), MOUNTING HARDWARE, POST, COMPLETE IN PLACE.